

SYRUP SEPARATOR LANCER PN: 82-3964/01 - CCUSA PN: 117044

STEP 1: Remove Outer Nozzle



Remove outer nozzle by gently rotating and pulling down.

STEP 2: Inspect Syrup Separator



(Interior view) Verify that separator has seal insert.

STEP 3: Install Syrup Separator



Replace with syrup separator, spout facing outward.

LANCER • 6655 LANCER BLVD. • SAN ANTONIO, TEXAS 78219 USA • 800-729-1500 www.lancercorp.com

"Lancer" is the registered trademark of Lancer • Copyright — 2008 by Lancer, all rights reserved.

SYRUP SEPARATOR LANCER PN: 82-3964/01 - CCUSA PN: 117044

STEP 1: Remove Outer Nozzle



Remove outer nozzle by gently rotating and pulling down.

STEP 2: Inspect Syrup Separator



(Interior view) Verify that separator has seal insert.

STEP 3: Install Syrup Separator



Replace with syrup separator, spout facing outward.

LANCER • 6655 LANCER BLVD. • SAN ANTONIO, TEXAS 78219 USA • 800-729-1500 www.lancercorp.com

"Lancer" is the registered trademark of Lancer • Copyright — 2008 by Lancer, all rights reserved.

**STEP 4: Ensure Engagement
of Separator**



Push the separator up and rotate so the spout faces right. Lock in place. Note that all tabs are also locked into place.

**STEP 5: Test Separator For
Leaks**



Activate the valve to dispense water or soda only. Water should flow only from the side spout. No water should be seen dripping or flowing from the center spout of the separator. If water is seen leaking through the center spout, remove the separator, re-install and test again.

STEP 6: Check Ratio



Place ratio cup as shown above and proceed by referring to brixing procedure.

**STEP 4: Ensure Engagement
of Separator**



Push the separator up and rotate so the spout faces right. Lock in place. Note that all tabs are also locked into place.

**STEP 5: Test Separator For
Leaks**



Activate the valve to dispense water or soda only. Water should flow only from the side spout. No water should be seen dripping or flowing from the center spout of the separator. If water is seen leaking through the center spout, remove the separator, re-install and test again.

STEP 6: Check Ratio



Place ratio cup as shown above and proceed by referring to brixing procedure.