


### INSTALLATION TIPS

- A. Install Time: 15 - 20 minutes
- B. Tools Required: Phillips Screwdriver
- C. Unpack the Adhesive Kit. Verify the contents are as listed:
  - Cleaning Pad, PN 95-0235
  - Sealant RTV, PN 15-0236
  - Adhesive Pad, PN 15-0235/01
- D. Disconnect power from the dispenser, by unplugging the dispenser.

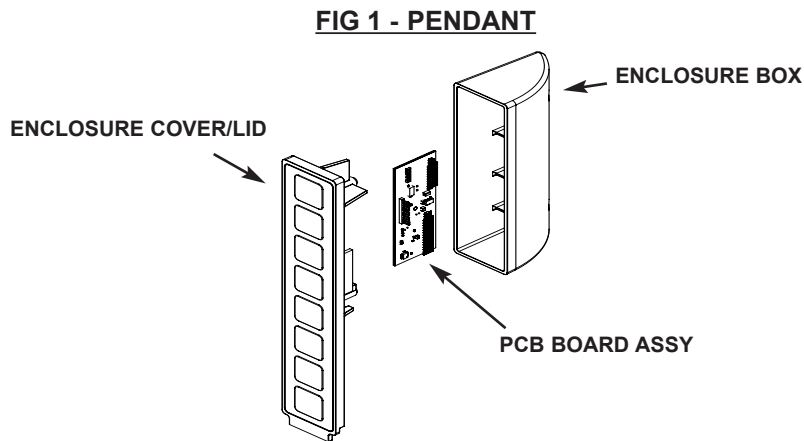

### SECTION 1 - PENDANT BOX PREP

- A. Separate the Pendant from the dispenser.
- B. Remove Pendant (Enclosure) Box from Lid by removing the two (2) screws that secure the box. Retain screws (Fig. 2)
- C. Remove all existing adhesive and sealant from both the pendant box and the dispenser.
- D. Reattach the pendant box to the lid.
- E. Secure Pendant Box (PN 05-3032) to the Lid (PN 05-3031), using the retained screws.
- F. Clean the side of the dispenser and the flat portion of the pendant box with the provided alcohol pad. Verify the side of the dispenser selected for installation is clean and dry.



## SECTION 2 - REATTACH PENDANT TO THE DISPENSER

- A. Remove the backing from one side of the adhesive pad and apply the pad to the flat portion of the pendant box.
- B. Reinstall the pendant in the original location ensuring the pendant is aligned vertically (Fig 3).

**FIG 3**



**WRONG**

**CORRECT**

- C. Apply the adhesive. **NOTE:** The adhesive will bond immediately preventing any adjustments.
  1. Select the desired location for the Pendant Box placement on the dispenser.
  2. Remove the adhesive backing and apply pressure to secure the Pendant Box into place.

## SECTION 3 - COMPLETE INSTALLATION

- A. Reconnect power to the dispenser.
- B. Confirm the Pendant Keypad is properly functioning by pressing the labeled buttons on the Pendant Keypad to dispense the requested product.
- C. Apply a small bead of sealant (PN 15-0236) along the top edge of the Pendant against the side of the dispenser. Apply sealant to the bottom of the Wire Trace and the countertop. Use sealant in any other areas as required by the local health codes.