

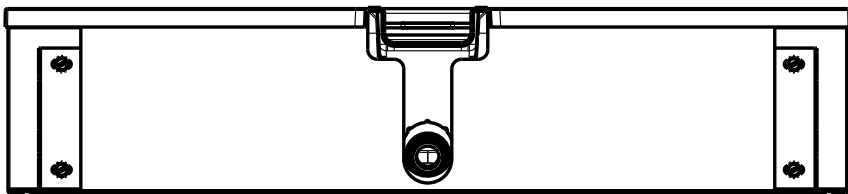

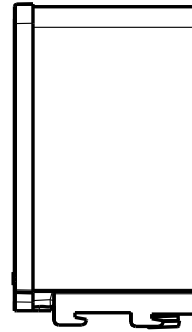




CURRENT DESIGN, AS DRIP TRAY IS SHIPPED

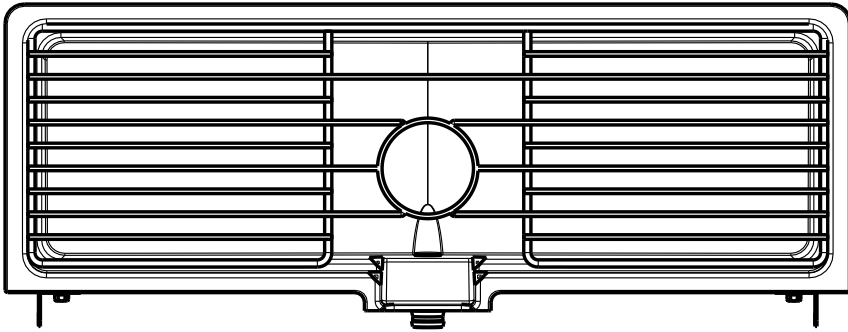

WHEN REPLACING THE LEGACY (PRE-2003) DESIGN HOOKS:  
REMOVE EXISTING HOOKS FROM DRIP TRAY ASSEMBLY  
AND REPLACE WITH 30-10644 AND 30-10645 AS SHOWN.

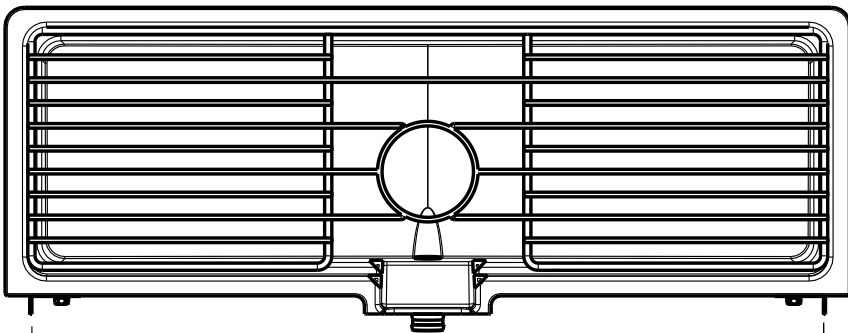

20.618  
SET THE DISTANCE BETWEEN  
HANGERS PER THIS DIMENSION  
.69

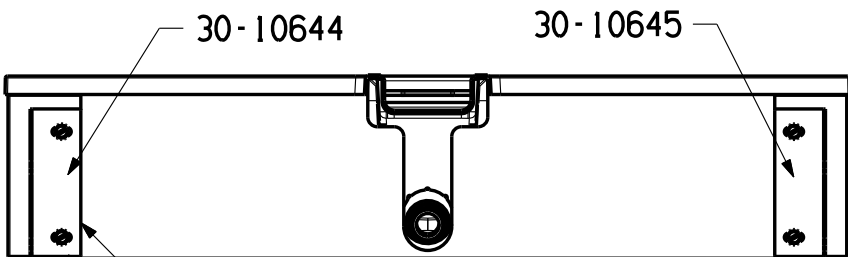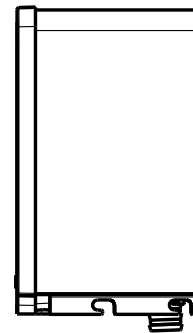

30-10644 30-10645

ALIGN EDGE OF HOOK  
WITH THESE EDGES

30-10645  
30-10644