

INSTRUCTION SHEET

FOR INSTALLATION OF SONIC CHILLER

1. Route 2 line insulated bundle between the pre-chiller and the QS Tower.

2. Connect a piece of 3/8" tubing from the water supply to the Check Valve.

Note: Make sure the check valve's arrow is facing as shown in diagram.

Slide the insulation sleeve over the tubing before connecting.

3. Connect a piece of 3/8" tubing from check valve to an "h" fitting as shown in diagram(Figure 1).

4. Connect line #1 of the insulated bundle tubing to the outlet side of the "Y" fitting at the pre-chiller and to one side of the "Y" fitting at the tower.

5. Connect the "y" fitting and the pigtail to the tower's water inlet as shown. Note: The pigtail must be 5" or less. Cut existing pigtail or use pigtail provided in the install kit.

6. Connect line #2 of the insulated bundle tubing to the other side of the "Y" fitting at the tower. Connect the other end to the straight side of the "h" fitting.

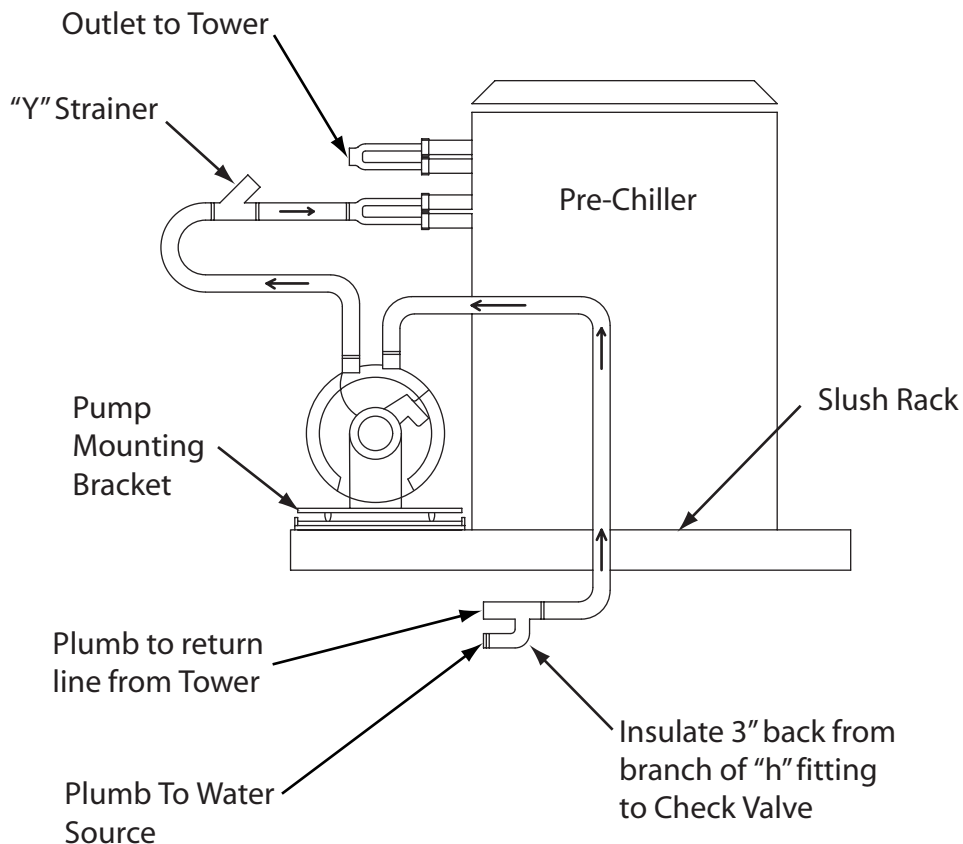


Figure 1

LANCER

6655 LANCER BLVD. • SAN ANTONIO, TEXAS 78219 USA • (210) 310-7000

FAX SALES

• NORTH AMERICA – 210-310-7245 • INTERNATIONAL SALES – 210-310-7242 • CUSTOMER SERVICE – 210-310-7242 •
• LATIN AMERICA – 210-310-7245 • EUROPE – 32-2-755-2399 • PACIFIC – 61-8-8268-1978 •

• FAX ENGINEERING: • 210-310-7096 •

• "Lancer" is the registered trademark of Lancer •
• Copyright — 2006 by Lancer, all rights reserved •

| | |
|-------|----------|
| DATE: | 07/12/07 |
| P.N. | 28-0717 |