

## Contents - 05-2905-SP


<u>Part Number</u>	<u>Description</u>
05-2905/01	Chute, Lower, ACIB
05-0999/01	Lever, Chute, IBD

### ⚠ WARNING

Please read all instructions before starting the installation. Turn off power to unit before beginning installation.

## Installation

1. Remove ice bin lid.
2. Gently remove the merchandiser from the unit.

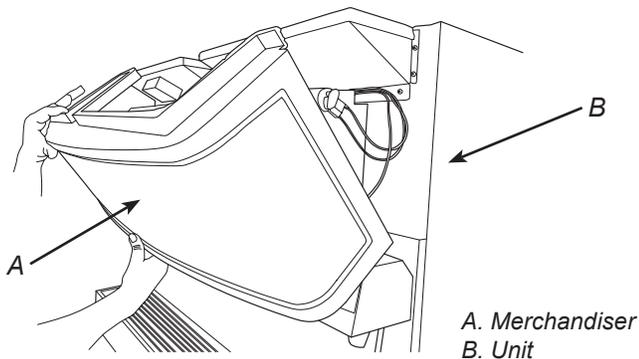


### NOTE


For units with stainless steel merchandisers, remove the screws from both the left and right side of the merchandiser before removal.

### ⚠ ATTENTION


If the unit has a Low Ice Light, then the connector must be unplugged in order to remove the merchandiser

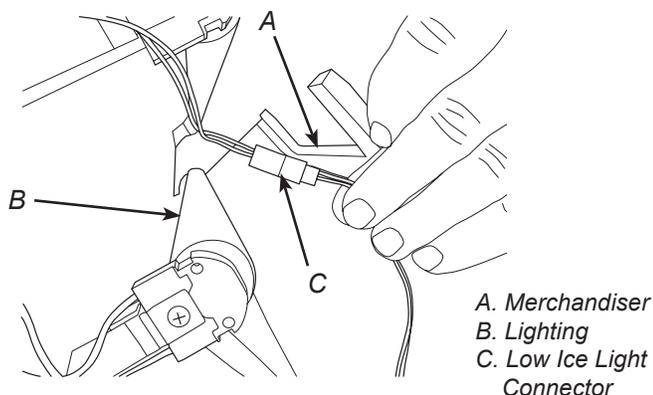

3. Locate the spring connecting the existing lower ice chute to the upper ice chute. Detach the spring from the existing upper ice chute by pulling up and out.

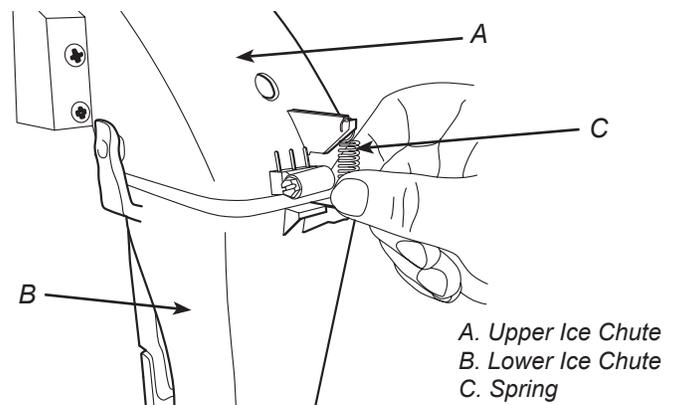


4. Remove the existing lower ice chute by carefully spreading apart the bracket arms connected to the upper ice chute.

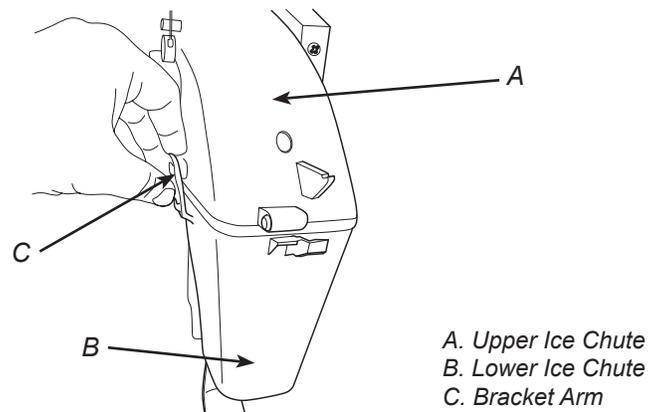


5. Remove the spring, detached in Step 3, from the lower ice chute.

6. Attach the new ice chute lever (PN: 05-0999/01) to the new lower ice chute (PN: 05-2905/01) by sliding the ice lever bracket into place towards the bottom of the lower ice chute.

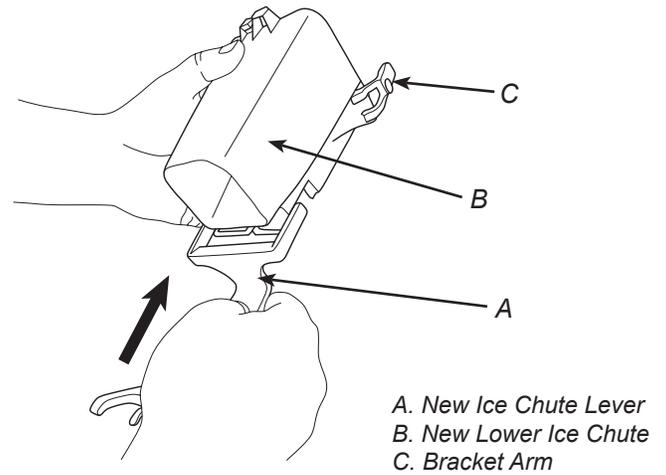

7. Attach the new lower ice chute assembly, installed in the previous step, to the existing upper ice chute by aligning the front of the lower ice chute to the upper ice chute then gently rotate the back of the lower chute until it locks in place.

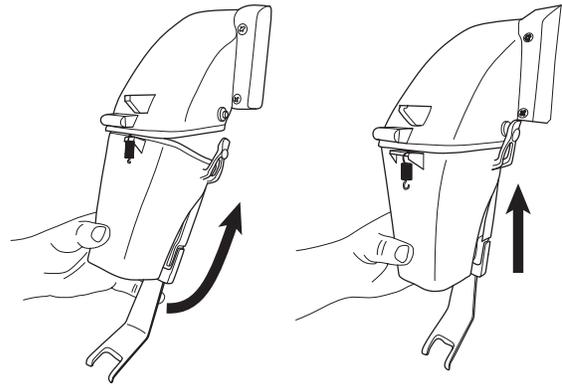

8. Connect the spring, removed in Step 5, to the newly installed lower ice chute assembly and the existing upper ice chute.
9. Reconnect the low ice light connector (if applicable) and reinstall merchandiser.
10. Reinstall ice bin lid.

#### NOTE

Please refer to the Lancer website ([lancercorp.com](http://lancercorp.com)) for more information relating to Lancer Installation and Operation Manuals, Instructions Sheets, Technical Bulletins, etc.

Lancer Corp., 6655 Lancer Blvd., San Antonio, Texas 78219

800-729-1500 - Technical Support/Warranty: 800-729-1550

[custserv@lancercorp.com](mailto:custserv@lancercorp.com) - [lancercorp.com](http://lancercorp.com)

Manual PN: 28-2851 - April 2015

"Lancer" is the registered trademark of Lancer © 2015 by Lancer, all rights reserved.