

NOTE

The Easy-Fill Circuit Board should be installed after the Easy-Fill Lever Kit, has been installed.

Fig 1. Connection Diagram

STEP 1

Use the **Figure 1** to connect Easyfill Circuit Board (for details, refer to Instruction Sheet PN 28-0813)

- Connect the yellow wire to the metal retainer on the water side (Fig 2).
- Pass the blue wire through the body of the valve and connect to the actuating lever (Fig 3).

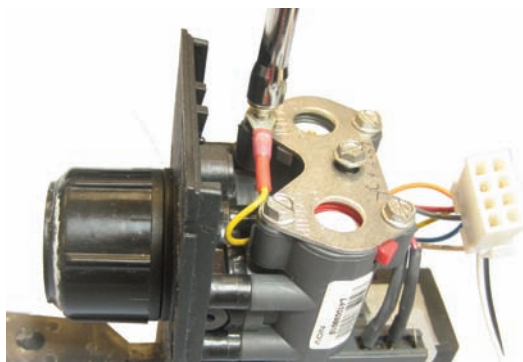


Figure 2. Yellow Wire

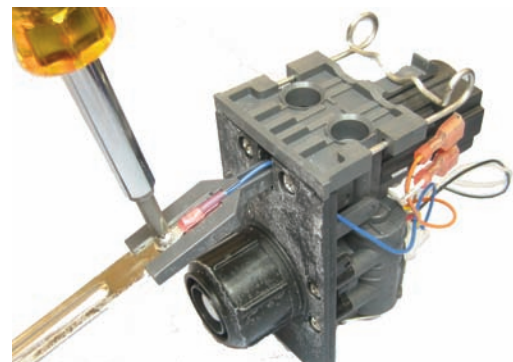


Figure 3. Blue Wire

STEP 2

Connect harness to the Easyfill Circuit Board (Fig 4).

Verify the Flow Control Bonnet is correctly installed prior to STEP 3.

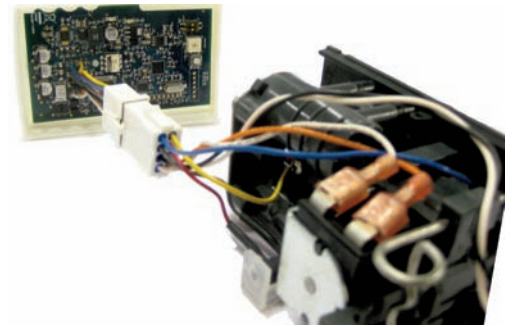


Figure 4. Connect Harness

STEP 3

Slide Electronic ID Panel into Valve Cover. **NOTE:** When sliding the harness Circuit Board into place (inside the Valve Cover), the correct placement of the Connector is on the left side (opposite to the switch). This will ensure the switch connection is secure.